
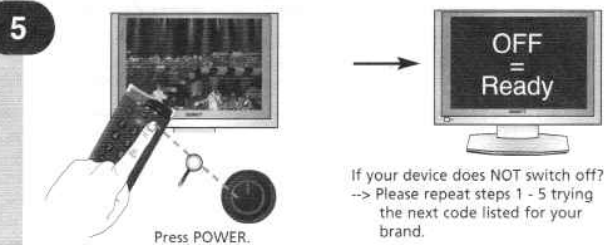
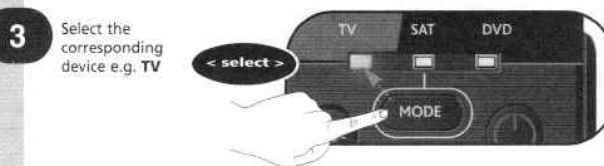


- Search Method * 9
 - Volume Control 9
 - ONE FOR ALL Combi Control 10
 - Master Power 10
- Extra Features (see manual on our Internet site)
- Mode Reassignment - Changing a device made to set up two (or more) devices of the same type.
 - Key Magic™ - Allows you to program functions from your original remote control even when LOST or BROKEN.
 - Macro - Allows you to send a sequence of commands with the press of a single key.

Direct Code Set Up

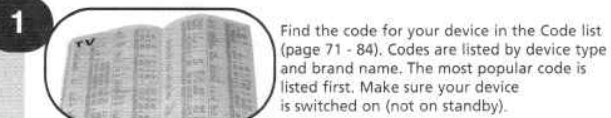

Congratulations! You should now be able to switch your device back ON and control your device successfully.

Direct Code Setup does NOT work

(tested SCIMO code 1423 but remote does NOT allow to store any code, LED always blinks once instead twice)


Search Method

The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL. The Search Method may also work if your brand is not listed at all.

Example: To search for your TV code: Switch on television (not on standby) and aim your ONE FOR ALL at your TV.

1. Press and hold **MAGIC** for 3 seconds until the blue LED (any LED) stays on.
2. Select the corresponding device e.g. **TV**
3. Press 9 9 1. The blue LED will blink twice.
4. Next, press **POWER**.
5. Press CH+ (over and over) again until your device switches OFF.


You may have to press these keys many times (up to 150 times) so please be patient.

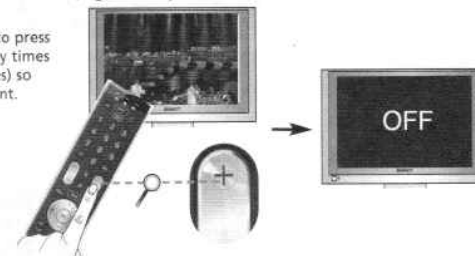

6. As soon as your television turns off, press the **magic** key to store the code.

Congratulations! You should now be able to switch your device back ON and control your device successfully.

 Volume Control

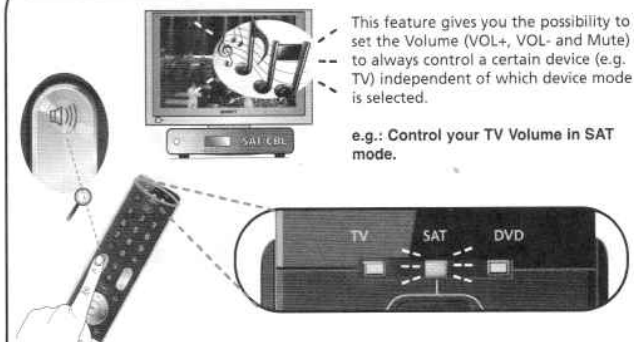

In this example we will set Volume Control (VOL+, VOL- and Mute) to "TV volume":

1. Press and hold **MAGIC** for 3 seconds until the blue LED (any LED) stays on.
2. Press **9 9 3**. The blue LED will blink twice.
3. Select the corresponding device e.g. **TV**.
4. Press and hold the **magic** key for 3 sec. The blue LED will blink twice and then switch off.

Now you have set the Volume Control to "TV volume". The VOL+, VOL- and Mute keys will always control "TV volume" independent which device mode key is selected.

How to deactivate Volume Control

- 1) Press and hold **MAGIC** for 3 seconds until the blue LED stays on.
- 2) Press **9 9 3**.
- 3) Press **Vol +**. The blue LED will blink 4 times.
All devices will send out their own VOL+, VOL- and MUTE.

How to remove a device from Volume Control

- 1) Press and hold **MAGIC** for 3 seconds until the blue LED stays on.
- 2) Press **9 9 3**.
- 3) Select the **device mode** you wish to deactivate from Volume Control.
- 4) Press **Vol -**. The blue LED will blink 4 times.
The removed device will send out its own VOL+, VOL- and MUTE.

Manual Search works

(press CH+ often, about 10 times until SCIMO switches off. Then press magic to store code)